

# Maximum Power Point Tracking (MPPT) Series TP-SC24-20-MPPT TP-SC24-40-MPPT MPPT Solar Charge Controller

## User Manual



|                          |                         |                 |
|--------------------------|-------------------------|-----------------|
| Battery Voltage          | TP-SC24-20-MPPT         | TP-SC24-40-MPPT |
| Battery voltage          | 12VDC/ 24VDC            |                 |
| Max. Solar Panel Voltage | 100V(25°C) , 90V(-25°C) |                 |
| Solar Charging Current   | 20A                     | 40A             |
| Max Load Current         | 20A                     |                 |

Thank you for choosing our product !

## Safety Instructions

1. As this controller deals with voltages that can exceed 60VDC (upper limit for human safety), do not operate it before reading this manual carefully and completing safety operation training.
2. The controller has no internal components that need maintenance or service, thus do not attempt to disassemble or repair the controller.
3. Install the controller indoors or outdoors in a weatherproof enclosure.
4. During operation, the heat sink may get very hot, install the controller with good ventilation.
5. It's recommended that a fuse or circuit breaker be installed between Battery, Solar, Load connections and controller.
6. Before making changes to any wiring be sure to disconnect the battery.
7. After installation, make sure all connections are solid. Loose connections will cause excessive heat at the wire connectors, causing premature failure.



**Warning:** means the operation in question is dangerous, and you should get properly prepared before proceeding.



**Note:** means the operation in question may cause damage.



**Tips:** means advice or instruction for the operator.

## Table of Contents

|  |    |
|--|----|
| <b>1. Product Introduction</b>   | 03 |
| 1.1 Product Overview   | 03 |
| 1.2 Product Features   | 04 |
| 1.3 Exterior and Interfaces  | 06 |
| 1.4 Introduction to Maximum Power Point Tracking Technology              | 07 |
| 1.5 Charging Stages Introduction   | 09 |
| <b>2. Product Installation</b>   | 12 |
| 2.1 Installation Precautions   | 12 |
| 2.2 Wiring Specifications  | 13 |
| 2.3 Installation and Wiring  | 14 |
| <b>3. Product Operation and Display</b>                                  | 18 |
| 3.1 LED Indicators   | 18 |
| 3.2 Key Operations   | 21 |
| 3.3 LCD Startup and Main Interface                                       | 21 |
| 3.4 Load Mode Setting Interface  | 23 |
| 3.5 System Parameter Settings  | 24 |
| <b>4. Product Protection Function and System Maintenance</b>             | 25 |
| 4.1 Protection Functions   | 25 |
| 4.2 System Maintenance   | 27 |
| 4.3 Abnormality Display and Warnings                                     | 28 |
| <b>5. Product Specification Parameters</b>                               | 28 |
| 5.1 Electric Parameters  | 28 |
| 5.2 Battery Type Default Parameters (parameters set in monitor software) | 29 |
| <b>6. Conversion Efficiency Curve</b>                                    | 31 |
| 6.1 12V System Conversion Efficiency                                     | 31 |
| 6.1 24V System Conversion Efficiency                                     | 31 |
| <b>7. Product Dimensions</b>   | 32 |

# 1. Product Introduction

## 1.1 Product Overview

- This product can keep monitoring the solar panel's generating power and tracking the highest voltage and current values (V) in real time, enabling the system to charge the battery with maximum power. It's designed to be used in off-grid solar photovoltaic systems to coordinate operation of the solar panel, battery and load, functioning as the core control unit in off-grid photovoltaic systems.
- This product features an LCD screen which can dynamically display the operating status, operating parameters, controller logs, control parameters, etc. Users can conveniently check parameters by the keys, and modify control parameters to cater to different system requirements.
- The controller utilizes a standard Modbus communication protocol, making it easy for users to check and modify system parameters remotely. Tycon offers a Bluetooth adapter TP-SC-BT1 for remote management purposes.
- With comprehensive electronic fault self-detecting functions and powerful electronic protection functions built into the controller, component damage caused by installation errors or system failures can be mostly avoided.

## 1.2 Product Features

- With the advanced dual-peak or multi-peak tracking technology, when the solar panel is shadowed or part of the panel fails resulting in multiple peaks on the I-V curve, the controller is still able to accurately track the maximum power point.
- A built-in maximum power point tracking algorithm can significantly improve the energy utilization efficiency of photovoltaic systems, and raise the charging efficiency by 15% to 20% compared with the conventional PWM method.
- A combination of multiple tracking algorithms enables accurate tracking of the optimum working point on the I-V curve in an extremely short time.
- The product boasts an optimum MPPT tracking efficiency of up to 99.9%.
- Advanced digital power supply technologies raise the circuit's energy conversion efficiency to as high as 98%.
- Charging program options are available for different types of batteries including gel batteries, sealed batteries, open batteries, lithium batteries, etc.
- The controller features a limited current charging mode. When the solar panel power exceeds a certain level and the charging current is larger than the rated current, the controller will automatically lower the charging power and bring the charging current to the rated level.
- Instantaneous large current startup of capacitive loads is supported.
- Automatic recognition of battery voltage is supported.
- LED fault indicators and an LCD screen which can display abnormality information help users to quickly identify system faults.
- Historical data storage function is available, and data can be stored for up to a year.
- The controller is equipped with an LCD screen with which users can not only check device operating data and statuses, but also modify controller parameters.
- The controller supports standard Modbus protocol, fulfilling the communication needs of various occasions.
- The controller employs a built-in over-temperature protection mechanism. When temperature surpasses the set value, the charging current will decline in linear proportion to the temperature so as to curb the temperature rise of the controller, effectively keeping the controller from being damaged by overheating.
- Featuring a temperature compensation function, the controller can automatically adjust charging and discharging parameters in order to extend the battery's service life.
- TVS lightning protection protects against surges caused by lightning.

## 1.3 Exterior and Interfaces

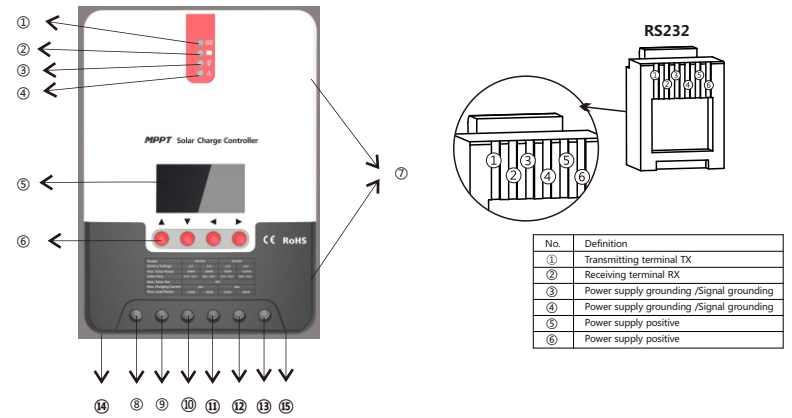


Fig. 1-1 Product appearance and interfaces

| No. | Item               | No. | Item                                    |
|-----|--------------------|-----|---|
| ①   | Charging indicator | ⑩   | Battery +                               |
| ②   | Battery indicator  | ⑪   | Battery -                               |
| ③   | Load indicator     | ⑫   | Load +                                  |
| ④   | Error indicator    | ⑬   | Load -                                  |
| ⑤   | LCD screen         | ⑭   | External temperature sampling interface |
| ⑥   | Operating Buttons  | ⑮   | RS232 communication interface           |
| ⑦   | Mounting holes     |     |   |
| ⑧   | Solar panel +      |     |   |
| ⑨   | Solar panel -      |     |   |

## 1.4 Introduction to Maximum Power Point Tracking Technology

Maximum Power Point Tracking (MPPT) is an advanced charging technology that enables the solar panel to output more power by adjusting the electric module's operating status. Due to the nonlinearity of solar arrays, there exists a maximum energy output point (maximum power point) on their curves. Unable to continuously lock onto this point to charge the battery, conventional controllers (employing switching and PWM charging technologies) can't get full power from the solar panel. But the Tycon solar charge controller featuring MPPT technology can continuously track arrays' maximum power point so as to get the maximum amount of power to charge the battery.

Take a 12V system as an example. As the solar panel's peak voltage (V<sub>pp</sub>) is approximately 17V while the battery's voltage is around 12V, when charging with a conventional charge controller, the solar panel's voltage will stay at around 12V, failing to deliver the maximum power. However, the MPPT controller can overcome the problem by adjusting the solar panel's input voltage and current in real time, realizing a maximum input power.

Compared with conventional PWM controllers, the MPPT controller can make the most of the solar panel's max. power and therefore provide larger charging current. Generally speaking, the MPPT can raise the energy utilization ratio by 15% to 20% in contrast with the PWM.

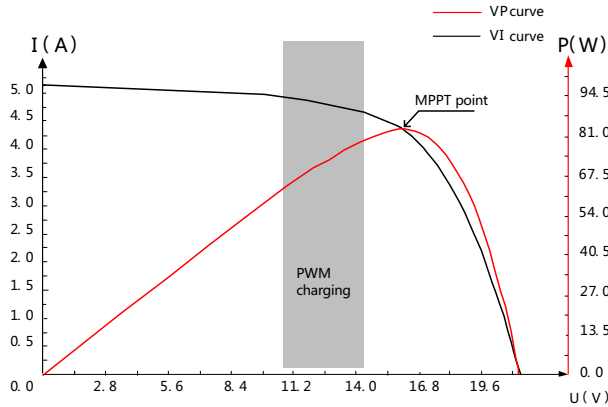


Fig. 1-2 Solar panel output characteristic curve

Meanwhile, due to changing ambient temperature and solar conditions, the max. power point varies frequently, and our MPPT controller can adjust parameter settings according to the environmental conditions in real time, so as to always keep the system close to the max. operating point. The whole process is entirely automatic without the need of human intervention.

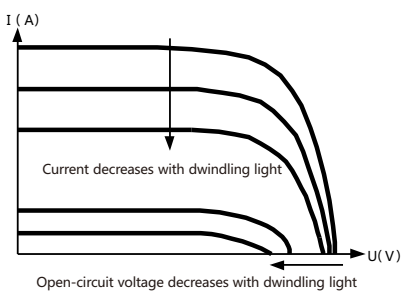


Fig. 1-3 Relation between solar panel output characteristics and illumination

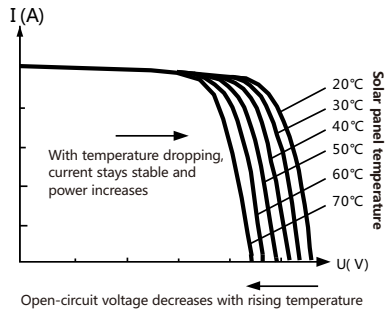


Fig. 1-4 Relation between solar panel output characteristics and temperature

## 1.5 Charging Stages Introduction

As one of the charging stages, MPPT can not be used alone, but has to be used together with boost charging, float charging, equalizing charging, etc. to complete charging of the battery. A complete charging process includes: fast charging, sustaining charging and float charging. The charging curve is as shown below:

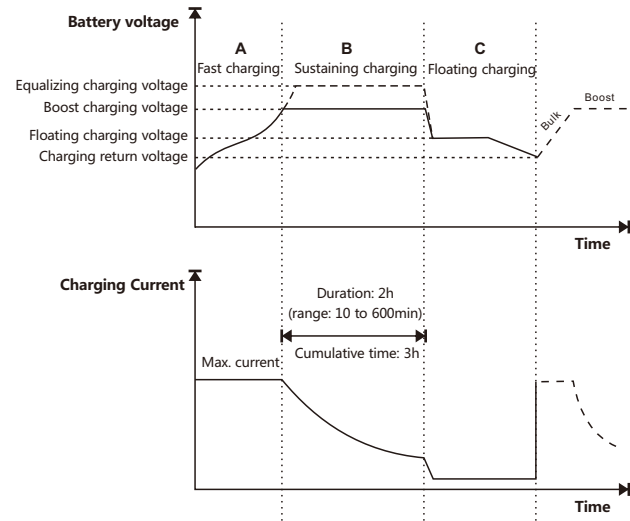


Fig. 1-5 Battery charging stages diagram

### a) Fast charging

At the fast charging stage, as the battery voltage has not reached the set value of full voltage (i.e. equalizing/ boost voltage) yet, the controller will perform MPPT charging on the battery with the maximum solar power. When the battery voltage reaches the preset value, constant voltage charging will begin.

### b) Sustaining charging

When the battery voltage reaches the set value of sustaining voltage, the controller will switch to constant voltage charging. In this process, no MPPT charging will be performed, and meanwhile the charging current will also gradually decrease. The sustaining charging stage itself consists of two sub-stages, i.e. equalizing charging and boost charging, the two of which are not sequential, with the equalizing charge getting activated only once every 30 days.

### > Boost charging

By default, boost charging generally lasts for 2h, but users can adjust preset values of duration and boost voltage point according to the actual needs. When the duration reaches the set value, the system will then switch to float charging.

### >Equalizing charging

#### ⚠ Warning: risk of explosion!

In equalizing charging, an open lead-acid battery can produce explosive gas, therefore the battery chamber shall have good ventilation conditions.

#### ⚠ Note: risk of equipment damage!

Equalizing charging may raise the battery voltage to a level that may cause damage to sensitive DC loads. Check and make sure that allowable input voltages of all the loads in the system are greater than the set value for battery equalizing charging.

#### ⚠ Note: risk of equipment damage!

Overcharge or too much gas generated may damage battery plates and cause active material on the battery plates to scale off. Equalizing charging to an excessively high level or for too long a period may cause damage. Read carefully the actual requirements of the battery deployed in the system.

Some types of batteries benefit from regular equalizing charging which can stir the electrolyte, balance the battery voltage and finish the electrochemical reaction. Equalizing charging raises the battery voltage to a higher level than the standard supply voltage and gasify the battery electrolyte. If the controller then automatically steers the battery into equalizing charging, the charging duration is 120 mins (default). In order to avoid too much generated gas or battery overheating, equalizing charging and boost charging won't repeat in one complete charging cycle.

#### Note:

1) When due to the installation environment or working loads, the system can't continuously stabilize the battery voltage to a constant level, the controller will initiate a timing process, and 3 hours after the battery voltage reaches the set value, the system will automatically switch to equalizing charging.

2) If no calibration has been done to the controller clock, the controller will perform equalizing charging regularly according to its internal clock every 30 days.

### >Floating charging

When finishing the sustaining charging stage, the controller will switch to float charging in which the controller lowers the battery voltage by diminishing the charging current and keeps the battery voltage at the set value of float charging voltage. In the float charging process, very light charging is carried out for the battery to maintain it at full state. At this stage, the loads can access almost all the solar power. If the loads consume more power than the solar panel could provide, the controller will not be able to keep the battery voltage at the float charging stage. When the battery voltage drops to the set value for returning to boost charging, the system will exit float charging and reenter into fast charging.

## 2. Product Installation

### 2.1 Installation Precautions

- Be very careful when installing the battery. For open lead-acid batteries, wear a pair of goggles during installation, and in case of contact with battery acid, flush with water immediately.
- In order to prevent the battery from being short-circuited, no metal objects shall be placed near the battery.
- Hydrogen gas may be generated during battery charging, thus make sure the ambient environment is well ventilated.
- Keep the battery away from fire sparks, as the battery may produce flammable gas.
- When installing the battery outdoors, take sufficient measures to keep the battery from direct sunlight and rain water intrusion.
- Loose connections or corroded wire may cause excessive heat generation which may further melt the wire's insulation layer and burn surrounding materials, and even cause a fire, therefore make sure all connections are tightened securely. Wires had better be fixed properly with ties, and when needs arise to move things, avoid wire swaying so as to keep connections from loosening.

- When connecting the system, the output terminal's voltage may exceed the top limit for human safety (60VDC). If operation needs to be done, be sure to use insulated tools and keep hands dry.
- The wiring terminals on the controller can be connected with a single battery or a pack of batteries. Following descriptions in this manual apply to systems employing either a single battery or a pack of batteries.
- Follow the safety advice given by the battery manufacturer.
- When selecting connection wires for the system, follow the criterion that the current density is not larger than 4A/mm<sup>2</sup>.
- Connect the controller's earth terminal to the ground.

### 2.2 Wiring Specifications

Wiring and installation methods must comply with national and local electrical specifications. The wiring specifications of the battery and loads must be selected according to rated currents, and see the following table for wiring specifications:

| Model           | Rated charging current | Rated Load current | Battery wire diameter(mm <sup>2</sup> ) | Load wire diameter (mm <sup>2</sup> ) |
|-----------------|------------------------|--------------------|---|---------------------------------------|
| TP-SC24-20-MPPT | 20A                    | 20A                | 5                                       | 5                                     |
| TP-SC24-40-MPPT | 40A                    | 20A                | 10                                      | 5                                     |

### 2.3 Installation and Wiring

⚠ Warning: risk of explosion! Never install the controller and an open Lead Acid battery in the same enclosed space! Nor shall the controller be installed in an enclosed space where battery gas may accumulate.

⚠ Warning: danger of high voltage! Photovoltaic arrays may produce a very high open-circuit voltage. Open the breaker or fuse before wiring, and be very careful during the wiring process.

⚠ Note: when installing the controller, make sure that enough air flows through the controller's radiator, and leave at least 150 mm of space both above and below the controller so as to ensure natural convection for heat dissipation. If the controller is installed in an enclosed box, make sure the box delivers reliable heat dissipation effect.

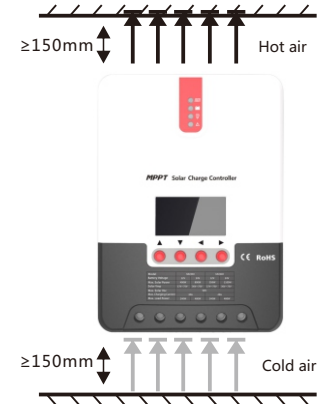



Fig. 2.1 Installation and heat dissipation

### Step 1: Choose a Proper Installation Site

Do not install the controller at a place that is subject to direct sunlight, high temperature or water intrusion, and make sure the ambient environment is well ventilated.


### Step 2: Mount the Controller

The controller is supplied with Qty 2 DIN Rail mounts for mounting to standard DIN rails. As an alternative you can mount directly to a wall or plate. Use the included installation guide to locate the mounting screw positions.

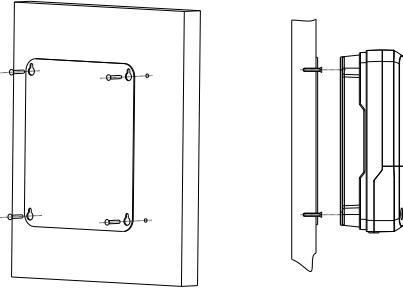

### Step 3: Connect Wires


In order to improve installation safety, we recommend the following wiring order:

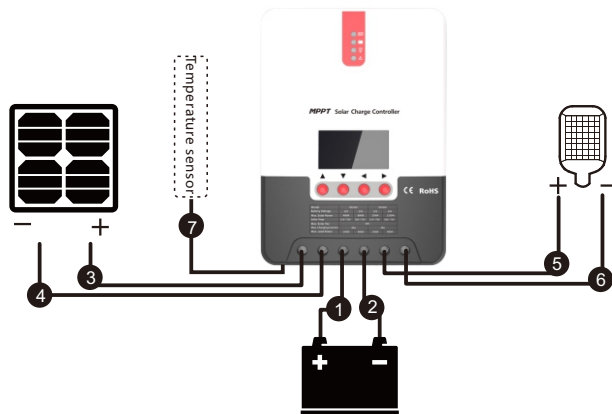



### ① Connecting to external temperature sampling interface

### ② Connecting communication cable

### ③ Connecting power cable

 Warning: risk of electric shock! We strongly recommend that fuses or breakers be connected at the photovoltaic array side, load side and battery side so as to avoid electric shock during wiring operation or faulty operations, and make sure the fuses and breakers are in open state before wiring.

 Warning: danger of high voltage! Photovoltaic arrays may produce a very high open-circuit voltage. Open the breaker or fuse before wiring, and be very careful during the wiring process.

 Warning: risk of explosion! Once the battery's positive and negative terminals or leads that connect to the two terminals get short-circuited, a fire or explosion will occur. Always be careful in operation.


First connect the battery, then the load, and finally the solar panel. When wiring, follow the order of first "+" and then "-".


### ④ Power on

After connecting all power wires solidly and reliably, check again whether wiring is correct and if the positive and negative poles are reversed. After confirming that no faults exist, first close the fuse or breaker of the battery, then see whether the LED indicators light up and the LCD screen displays information. If the LCD screen fails to display information, open the fuse or breaker immediately and recheck if all connections are done correctly.

If the battery functions normally, connect the solar panel. If sunlight is intense enough, the controller's charging indicator will light up or flash and begin to charge the battery.

After successfully connecting the battery and photovoltaic array, finally close the fuse or breaker of the load, and then you can manually test whether the load can be normally turned on and off. For details, refer to information about load working modes and operations.

 Warning: when the controller is in normal charging state, disconnecting the battery will have some negative effect on the DC loads, and in extreme cases, the loads may get damaged.





 Warning: within 10 minutes after the controllers stops charging, if the battery's poles are reversed, internal components of the controller may be damaged.

### Note:






- 1) The battery's fuse or breaker should be installed as close to the controller as possible, and it's recommended that installation distance be not more than 150mm.
- 2) If no remote temperature sensor is connected to the controller, the battery temperature value will stay at 25 °C.
- 3) If an inverter is deployed in the system, directly connect the inverter to the battery, and do not connect it to the controller's load terminals.

### 3. Product Operation and Display

#### 3.1 LED Indicators

|  |                         |  |
|--|-------------------------|--|
|  | ① ---PV array indicator | Indicating the controller's current charging mode.         |
|  | ② ---BAT indicator      | Indicating the battery's current state.                    |
|  | ③ ---LOAD indicator     | Indicating the loads' On/ Off and state.                   |
|  | ④ ---ERROR indicator    | Indicating whether the controller is functioning normally. |

#### ➤ PV array indicator:

| No. | Graph  | Indicator state  | Charging state           |
|-----|--|--|--------------------------|
| ①   |  BULK <small>Steady on, charging in max. power</small>                    | Steady on  | MPPT charging            |
| ②   |  ACCEPTANCE <small>Slow flashing, boost charging</small>                  | Slow flashing<br>(a cycle of 2s with on and off each lasting for 1s)   | Boost charging           |
| ③   |  FLOAT <small>Single flashing, floating charging</small>                  | Single flashing<br>(a cycle of 2s with on and off lasting respectively for 0.1s and 1.9s)                    | Floating charging        |
| ④   |  EQUALIZE <small>Quick flashing, equalizing charging</small>              | Quick flashing<br>(a cycle of 0.2s with on and off each lasting for 0.1s)                                    | Equalizing charging      |
| ⑤   |  CURRENT LIMITED <small>Double flashing, current-limited charging</small> | Double flashing<br>(a cycle of 2s with on for 0.1s, off for 0.1s, on again for 0.1s, and off again for 1.7s) | Current-limited charging |
| ⑥   |  | Off  | No charging              |

#### ➤ BAT indicator:

| Indicator state  | Battery state           |
|--|-------------------------|
| Steady on  | Normal battery voltage  |
| Slow flashing (a cycle of 2s with on and off each lasting for 1s)      | Battery over-discharged |
| Quick flashing (a cycle of 0.2s with on and off each lasting for 0.1s) | Battery over-voltage    |





#### ➤ LOAD indicator:


| Indicator state  | Load state                       |
|--|----------------------------------|
| Off  | Load turned off                  |
| Quick flashing (a cycle of 0.2s with on and off each lasting for 0.1s) | Load overloaded/ short-circuited |
| Steady on  | Load functioning normally        |

#### ➤ ERROR indicator:


| Indicator state | Abnormality indication    |
|-----------------|---------------------------|
| Off             | System operating normally |
| Steady on       | System malfunctioning     |

#### 3.2 Key Operations


|   |        |   |
|---|--------|---|
|  | Up     | Page up; increase the parameter value in setting                      |
|  | Down   | Page down; decrease the parameter value in setting                    |
|  | Return | Return to previous menu (exit without saving)                         |
|  | Set    | Enter into sub-menu; set/ save<br>Turn on/ off loads (in manual mode) |

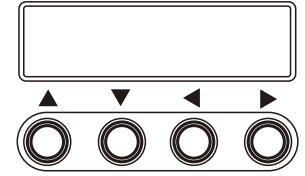

#### 3.3 LCD Startup and Main Interface

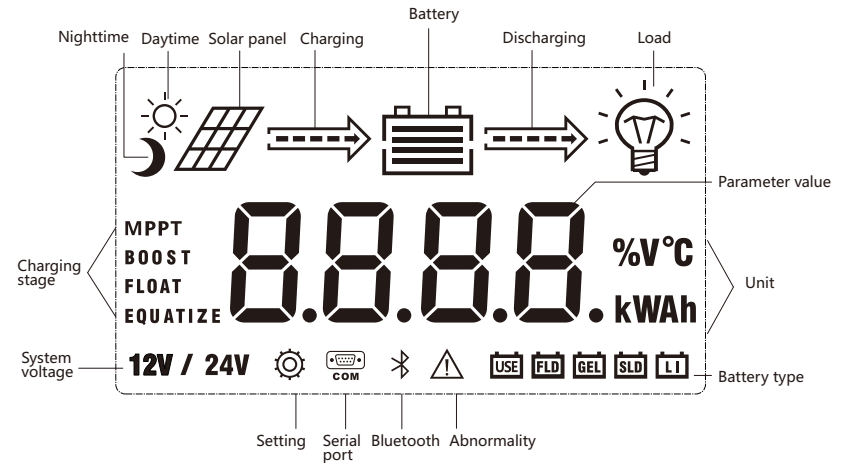


### 3.3.1 Startup interface

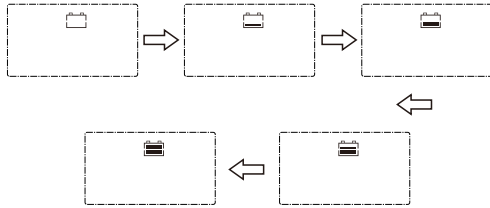

During startup, the 4 indicators will first flash successively, and after self-test, the LCD screen starts and displays the battery's voltage level which will be either a fixed voltage selected by the user or a voltage automatically recognized.

### 3.3.2 Main interface

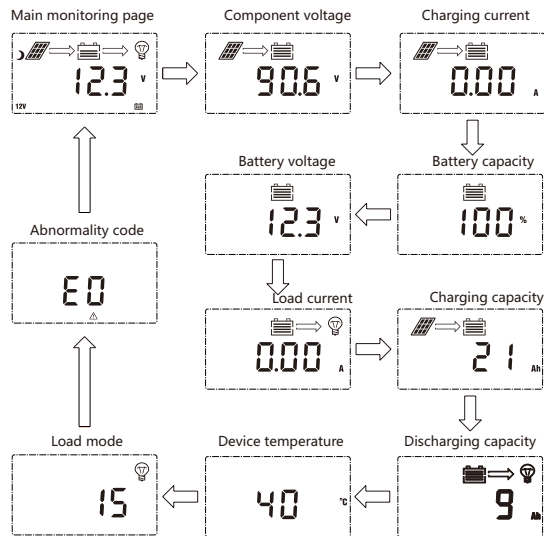

## 3.4 Load Mode Setting Interface


### 3.4.1 Load modes introduction

This controller has 5 load operating modes which will be described below:

| No.  | Mode  | Descriptions  |
|------|---|---|
| 0    | Sole light control (nighttime on and daytime off) | When no sunlight is present, the solar panel voltage is lower than the light control on voltage, and after a time delay, the controller will switch on the load; when sunlight emerges, the solar panel voltage will become higher than the light control off voltage, and after a time delay, the controller will switch off the load. |
| 1~14 | Light control + time control 1 to 14 hours        | When no sunlight is present, the solar panel voltage is lower than the light control on voltage, and after a time delay, the controller will switch on the load. The load will be switched off after working for a preset period of time.   |
| 15   | Manual mode                                       | In this mode, the user can switch the load on or off by the keys, no matter whether it's day or night. This mode is designed for some specially purposed loads, and also used in the debugging process. This is default mode.   |
| 16   | Debugging mode                                    | Used for system debugging. With light signals, the load is shut off; without light signals, the load is switched on. This mode enables fast check of the correctness of system installation during installation debugging.  |
| 17   | Normal on mode                                    | The energized load keeps outputting, and this mode is suitable for loads which need 24-hour power supply.   |

### 3.4.2 Load mode adjustment

Users can adjust the load mode as needed on their own, and the default mode is Manual mode (see "load modes introduction"). The method for adjusting load modes is as follows:

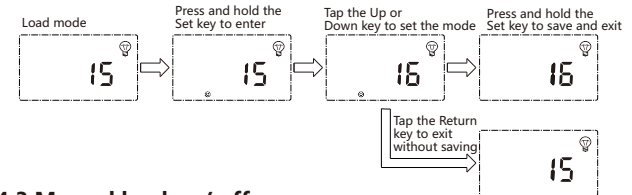


### 3.4.3 Manual load on/ off page

Manual operation is effective only when the load mode is manual mode (15), and tap the Set key to switch on/ off the load under any main interface.

## 3.5 System Parameter Settings

Under any interface other than load modes, press and hold the Set key for 3 seconds to enter into the parameter setting interface.

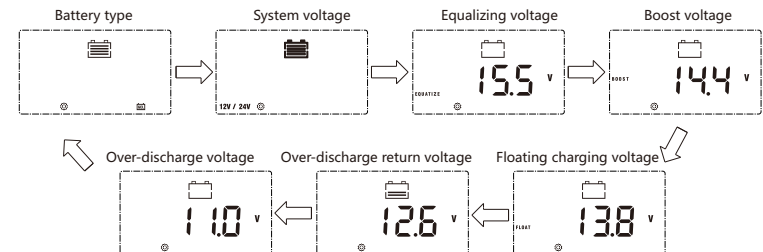



After entering into the setting interface, tap the Set key to switch the menu for setting, and tap the Up or Down key to increase or decrease the parameter value in the menu. Then tap the Return key to exit (without saving parameter setting), or press and hold the Set key to save setting and exit.

**⚠ Note: after system voltage setting, power supply has to be switch off and then on again, otherwise the system may work under an abnormal system voltage.**

The controller enables users to customize the parameters according to the actual conditions, but parameter setting must be done under the guidance of a professional person, or else faulty parameter settings may render the system not able to function normally. For details about parameter settings, see table 3.

There are 4 factory presets (FLD,SLD,GEL,LI) and 1 customizable set (USE).

| Parameter setting cross-reference table |                |                                 |                    |                 |
|---|----------------|---------------------------------|--------------------|-----------------|
| No.                                     | Displayed item | Description                     | Parameter range    | Default setting |
| 1                                       | TYPE OF BAT    | Battery type                    | USE/FLD/SLD/GEL/LI | Sealed (SLD)    |
| 2                                       | VOLT OF SYS    | System voltage                  | 12V/24V            | AUTO            |
| 3                                       | EQUALIZ CHG    | Equalizing charging voltage     | 9.0 ~ 17.0V        | 14.6V           |
| 4                                       | BOOST CHG      | Boost charging voltage          | 9.0 ~ 17.0V        | 14.4V           |
| 5                                       | FLOAT CHG      | Floating charging voltage       | 9.0 ~ 17.0V        | 13.8V           |
| 6                                       | LOW VOL RECT   | Over-discharge recovery voltage | 9.0 ~ 17.0V        | 12.6V           |
| 7                                       | LOW VOL DISC   | Over-discharge voltage          | 9.0 ~ 17.0V        | 11.0V           |

Table 3

## 4. Product Protection Function and System Maintenance

### 4.1 Protection Functions

#### • Waterproof

Waterproof level: IP32

#### • Input power limiting protection

When the solar panel power exceeds the rated power, the controller will limit the solar panel power under the rated power so as to prevent excessively large currents from damaging the controller and enter into current-limited charging.

#### • Battery reverse connection protection

If the battery is reversely connected, the system will simply not operate so as to protect the controller from damage.

#### • Photovoltaic input side too high voltage protection

If the voltage on the photovoltaic array input side is too high, the controller will automatically cut off photovoltaic input.

#### • Photovoltaic input side short-circuit protection

If the photovoltaic input side gets short-circuited, the controller will halt charging, and when the short circuit issue gets cleared, charging will automatically resume.

#### • Photovoltaic input reverse-connection protection

When the photovoltaic array is reversely connected, the controller will not break down, and when the connection problem gets solved, normal operation will resume.

#### • Load overpower protection

When the load power exceeds the rated value, the load will enter into delay protection.

#### • Load short-circuit protection

When the load is short-circuited, the controller can implement protection in a quick and timely manner, and will try to switch on the load again after a time delay. This protection can be carried out up to 5 times a day. Users can also manually address the short circuit problem when finding the load is short-circuited via the abnormality codes on the system data analysis page.

#### • Reverse charging protection at night

This protection function can effectively prevent the battery from discharging through the solar panel at night.

#### • TVS lightning protection.

#### • Over-temperature protection.

When the controller temperature exceeds the set value, it will decrease the charging power or halt charging. See the following diagram:

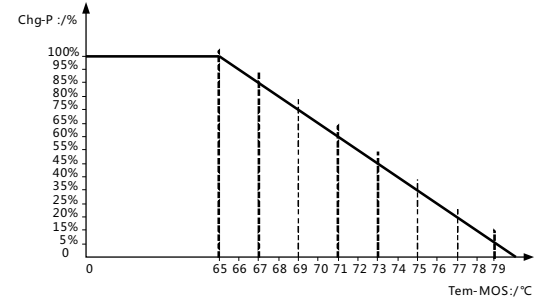


Fig. 4-1

### 4.2 System Maintenance

- In order to always keep the controller's performance at its optimum level, we recommend that the following items be checked twice a year:
- Make sure the airflow around the controller is not blocked and clear away any dirt or debris on the radiator.
- Check wire insulation damage due to exposure to sunlight, friction with adjacent objects, dry rot, damage by insects or rodents, etc. Repair or replace those affected wires when necessary.
- Verify that indicators function in line with device operations. Note any faults or displayed errors and take corrective measures if necessary.
- Check all wiring terminals for any sign of corrosion, insulation damage, overheat, combustion/ discoloration, and tighten the terminal screws firmly.
- Check if there are any dirt, nesting insects or corrosion, and clean as required.



**Warning: risk of electric shock! Before carrying out the above inspections or operations, always make sure all power supplies of the controller have been disconnected!**

### 4.3 Error Display and Warnings

| No. | Error display | Description                                | LED indicationk   |
|-----|---------------|--|---|
| 1   | EO            | No Error                                   | ERROR indicator off                                       |
| 2   | E1            | Battery over-discharge                     | BAT indicator flashing slowly ERROR indicator steady on   |
| 3   | E2            | System over-voltage                        | BAT indicator flashing quickly ERROR indicator steady on  |
| 4   | E3            | Battery under-voltage warning              | ERROR indicator steady on                                 |
| 5   | E4            | Load short circuit                         | LOAD indicator flashing quickly ERROR indicator steady on |
| 6   | E5            | Load overloaded                            | LOAD indicator flashing quickly ERROR indicator steady on |
| 7   | E6            | Over-temperature inside controller         | ERROR indicator steady on                                 |
| 9   | E8            | Photovoltaic component overloaded          | ERROR indicator steady on                                 |
| 11  | E10           | Photovoltaic component over-voltage        | ERROR indicator steady on                                 |
| 12  | E13           | Photovoltaic component reversely connected | ERROR indicator steady on                                 |

## 5. Product Specification Parameters

### 5.1 Electric Parameters

| Parameter                       | Value                           |                 |
|---------------------------------|---------------------------------|-----------------|
| Model                           | TP-SC24-20-MPPT                 | TP-SC24-40-MPPT |
| System voltage                  | 12V/24VAuto                     |                 |
| Self Consumption                | 0.7 W to 1.2W                   |                 |
| Battery voltage                 | 9VDC to 35VDC                   |                 |
| Max. solar input voltage        | 100VDC (25°C), 90VDC (-25°C)    |                 |
| Max. power point voltage range  | Battery voltage + 2VDC to 75VDC |                 |
| Rated charging current          | 20A                             | 40A             |
| Rated load current              | 20A                             |                 |
| Max. capacitive load capacity   | 10000uF                         |                 |
| Conversion efficiency           | ≤98%                            |                 |
| MPPT tracking efficiency        | > 99%                           |                 |
| Temperature compensation factor | -3.0mv/ °C/ Cell (default)      |                 |
| Operating temperature           | -35°C to +55°C                  |                 |
| Protection degree               | IP32                            |                 |
| Weight                          | 1.4Kg                           | 2Kg             |
| Communication method            | RS232                           |                 |
| Altitude                        | ≤ 3000m                         |                 |
| Product dimensions              | 210*151*59.5mm                  | 238*173*72.5mm  |

### 5.2 Battery Type Default Parameters (parameters set in monitor software)


| Parameters cross-reference table for different types of batteries |                                   |                                |                                 |                 |  |
|---|-----------------------------------|--------------------------------|---------------------------------|-----------------|--|
| Voltage to set<br>Battery type                                    | Sealed lead-acid<br>battery (SLD) | Gel lead-acid<br>battery (GEL) | Open lead-acid<br>Battery (FLD) | Li battery (LI) | User (USE)<br>(self-customized)                                    |
| Over-voltage cut-off voltage                                      | 16.0V                             | 16.0V                          | 16.0V                           | ----            | 9 ~ 17V  |
| Equalizing voltage  | 14.6V                             | ----                           | 14.8V                           | ----            | 9 ~ 17V  |
| Boost voltage   | 14.4V                             | 14.2V                          | 14.6V                           | 14.4V           | 9 ~ 17V  |
| Floating charging voltage   | 13.8V                             | 13.8V                          | 13.8V                           | ----            | 9 ~ 17V  |
| Boost return voltage  | 13.2V                             | 13.2V                          | 13.2V                           | ----            | 9 ~ 17V  |
| Low-voltage cut-off return voltage                                | 12.6V                             | 12.6V                          | 12.6V                           | 12.6V           | 9 ~ 17V  |
| Under-voltage warning voltage                                     | 12.0V                             | 12.0V                          | 12.0V                           | ----            | 9 ~ 17V  |
| Low-voltage cut-off voltage                                       | 11.1V                             | 11.1V                          | 11.1V                           | 11.1V           | 9 ~ 17V  |
| Discharging limit voltage   | 10.6V                             | 10.6V                          | 10.6V                           | ----            | 9 ~ 17V  |
| Over-discharge time delay   | 5s                                | 5s                             | 5s                              | ----            | 1 ~ 30s  |
| Equalizing charging duration                                      | 120 minutes                       | ----                           | 120 minutes                     | ----            | 0 ~ 600 minutes  |
| Equalizing charging interval                                      | 30 days                           | 0 days                         | 30 days                         | ----            | 0 ~ 250D<br>(0 means the equalizing charging function is disabled) |
| Boost charging duration   | 120 minutes                       | 120 minutes                    | 120minutes                      | ----            | 10 ~ 600 minutes   |

When selecting User (USE), the battery type is to be self-customized, and in this case, the default system voltage parameters are consistent with those of the sealed lead-acid battery. When modifying battery charging and discharging parameters, the following rule must be followed:


- Over-voltage cut-off voltage > Charging limit voltage ≥ Equalizing voltage ≥ Boost voltage ≥ Floating charging voltage > Boost return voltage;
- Over-voltage cut-off voltage > Over-voltage cut-off return voltage;
- Low-voltage cut-off return voltage > Low-voltage cut-off voltage ≥ Discharging limit voltage;
- Under-voltage warning return voltage > Under-voltage warning voltage ≥ Discharging limit voltage;
- Boost return voltage > Low-voltage cut-off return voltage

## 6. Conversion Efficiency Curve


### 6.1 12V System Conversion Efficiency

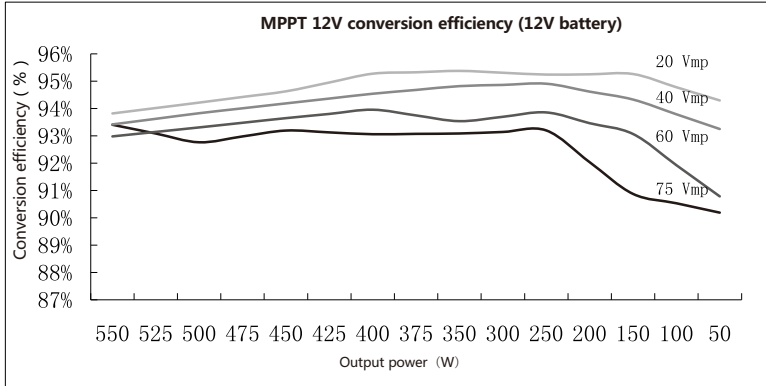

### 6.1 24V System Conversion Efficiency

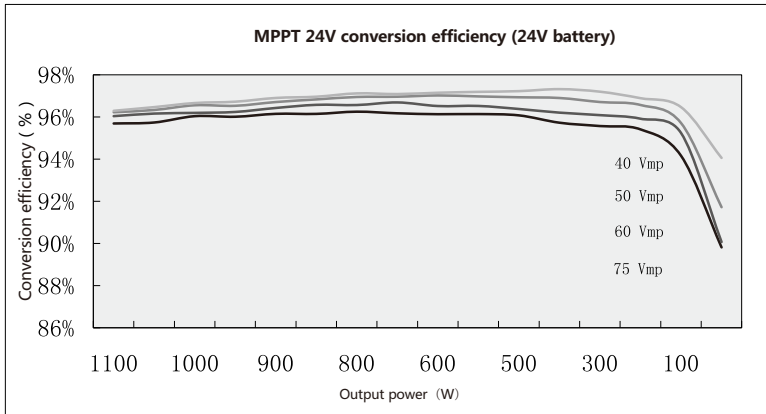

## 7. Product Dimensions

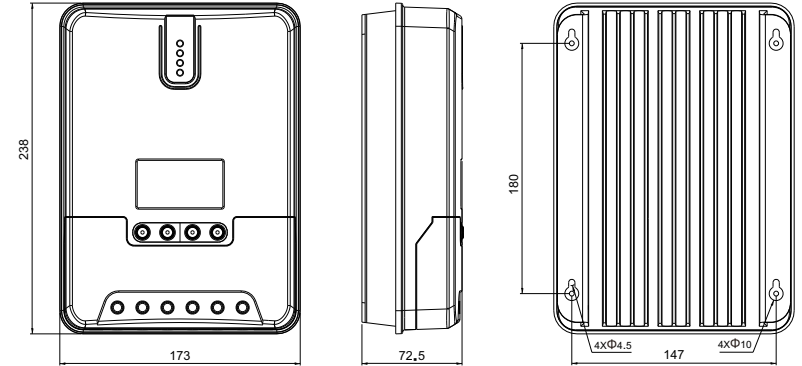




### TP-SC24-40-MPPT

Product dimensions : 238\*173\*72.5mm

Hole positions : 180\*147mm

Hole diameter : Φ3mm

Applicable wire : max. 8 AWG

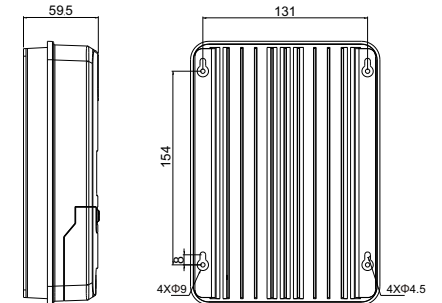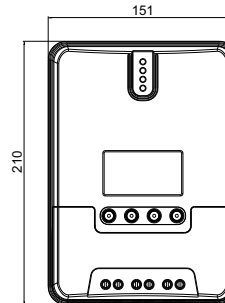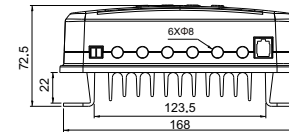

### TP-SC24-20-MPPT

Product dimensions : 210\*151\*59.5mm

Hole positions : 154\*131mm

Hole diameter : Φ3mm

Applicable wire : max. 8 AWG

