



RPPL

RemotePro™ Remote Power System

- Wireless Base Stations and Client Devices
- Surveillance Cameras
- Remote Sensors
- Remote Lighting
- Off Grid Electronics



Congratulations! on your purchase of the RemotePro™ off-grid remote power system. Please take a moment to review this Qwik Install Guide before assembly or battery installation.



DANGER! Avoid Powerlines! You Can Be Killed!

When following the instructions in this guide take extreme care to avoid contact with overhead power lines, lights and power circuits. Contact with power lines, lights or power circuits may be fatal. We recommend to install no closer than 20 feet to any power lines.

Safety: For your own protection, follow these safety rules.

- **Perform as many functions as possible on the ground**
- **Do not attempt to install on a rainy, windy or snowy day or if there is ice or snow accumulation at the install site or if the site is wet.**
- **Make sure there are no people, pets, etc. below when you are working on a roof or ladder.**



Recommended Tools: Phillips Screwdriver, 1/2" Open End Wrench, 5/16" nut driver, Flat Blade Screwdriver



Please help preserve the environment and return used batteries to an authorized depot



Qwik Install

STEP 1: Connect 18AWG wire to the solar panel inside wire junction box. Install solar panel to the mount so that junction box is at the top or side. Install mount to 2" to 4" pole. Solar panel should be facing South if in Northern Hemisphere. If you are planning to keep solar panel angle fixed all year then set the angle to $\text{Your_Latitude} * 0.9 + 30$

STEP 2: Mount any electronics inside the enclosure then mount the enclosure to the pole. We recommend mounting the enclosure directly under the solar panel and just low enough that the enclosure cover can be opened without interfering with solar panel tilted at its winter angle.

Note: The enclosure and solar panel can also be mounted to a wall if desired.

STEP 3: Connect a CAT5 cable between the controller POE OUT and the electronics. There is a secondary voltage output on the back of the controller which can be used in addition to the POE OUT. The secondary output is equal to the battery voltage.

Note: If grid power is available the batteries can also be charged over POE using an appropriate power supply/POE Inserter and CAT5 cable connected to the controller POE Input. We offer a POE inserter model number **POE-INJ-S** and a 24V 3.75A power supply model number **PS24V-3.75** that are designed for this use.

STEP 4: Route 18AWG wire from solar panel into the enclosure and

connect to the controller solar panel input. Make sure to maintain correct polarity.

STEP 5: Install batteries to enclosure using Velcro straps.



If the Solar Controller is model **TP-SC12xx** you must wire batteries and solar for 12V configuration. If Solar controller is model **TP-SCPOE-24xx** you must wire solar panels and batteries for 24V configuration.

STEP 6: Connect the Battery cables to Controller BAT terminals and then to the batteries. Be sure to observe polarity. Black wire connects to battery negative terminal and BAT(-) terminal on the controller. When a fully charged battery is connected, the Green LOA LED should light on controller and power should be present on POE output and also green wire terminal connector.

STEP 7: Make sure lid gasket is clean and free from any particles, then carefully close the cover, making sure that wires are clear of the seam and hinge area. The cover snaps into place. There is one center security bolt that can be used to secure the cover.

NOTE: If you have any unconnected battery connectors on battery cable after installation, make sure they are wrapped with electrical tape so that there is no chance of shorting the connector to any metal. You can also remove the extra cable/connector permanently by cutting the cable at the existing battery connection.

Controller Wire Terminal Output Wiring



FG = Frame Ground. Connect to Earth Ground

V- (There are two V- connections)

V+ (There are two V+ connections)

Device 1
- +
Device 2
+ -

SPECIFICATIONS

Subject to change without notice



	RPPL12	RPPL24
<i>Continuous Power Rating</i>	8W	
<i>Maximum Power Rating</i>	30W	
<i>Reserve Power @ 8W Load</i>	27 hours	
<i>Battery Voltage (DC)</i>	12V	24V
<i>POE Output Voltage (DC)</i>	12V, 18V, 24V or 48V	24V or 48V
<i>POE Input Voltage (DC)</i>	18-57V	36-57V
<i>Battery Capacity</i>	36Ah	18Ah
<i>Battery Type</i>	Valve Regulated Sealed Lead Acid / Absorbent Glass Mat (AGM)	
<i>Battery Life</i>	5 Years	
<i>Controller Type</i>	Dual Input Solar/POE, PWM, 12V 8A Max Solar Panel Size 135W	Dual Input Solar/POE, PWM, 24V 8A Max Solar Panel Size 270W
<i>Overcharge Protection</i>	14.4V	27.3V
<i>Over-discharge protection</i>	11V	20V
<i>Over-discharge recovery</i>	12V	24.3V
<i>Self Consumption</i>	<0.5W	
<i>Enclosure Type</i>	Polycarbonate	
<i>Enclosure External Size</i>	17.5 x 12.5 x 6" (445 x 318x 152mm)	
<i>Enclosure Internal Size</i>	14 x 10 x 5" (356 x 254 x 127mm)	
<i>Space for Customer Equip</i>	3 x 5 x 3" (76 x 127 x 76mm)	
<i>Operating Temperature</i>	-30°C to +60°C	
<i>System Weight (no batts)</i>	4lb (1.8kg)	
<i>Battery Weight (each)</i>	2.5kg (5.5lb)	

TECH CORNER

Additional Information you may find useful

- CONTROLLER:** The 12V controller turns off power to the load at 11V and reconnects when the battery reaches 12V. The 24V controller turns off at 20V and on at 24V. This protects battery from overdischarge and increases battery life and performance.
- CAPACITY:** The RemotePro RPPL with 30W panel is rated at 8W continuous power output with 6 hours of peak sun per day. Reserve

Place	Optimum Winter Tilt
Houston / Cairo	56 deg
Albuquerque / Tokyo	60.5 deg
Denver / Madrid	65 deg
Minneapolis / Milano	69.5 deg
Winnipeg / Prague	74 deg

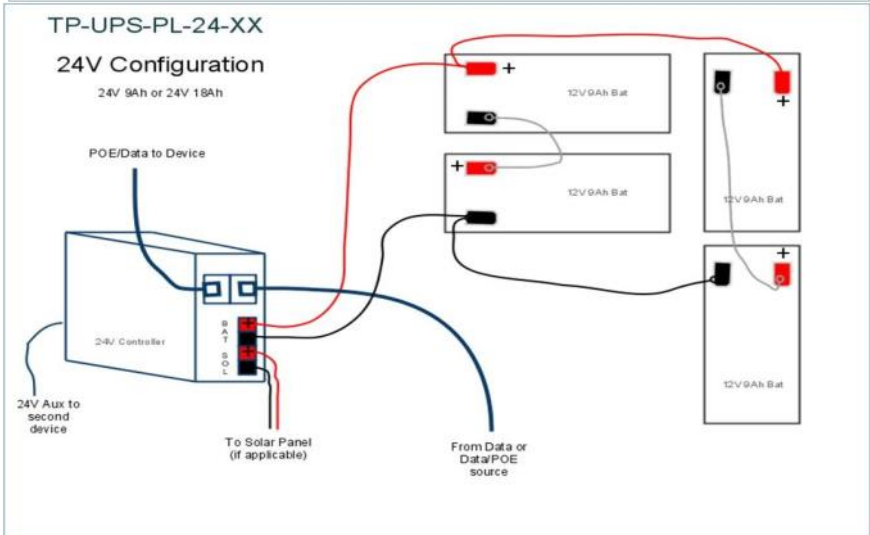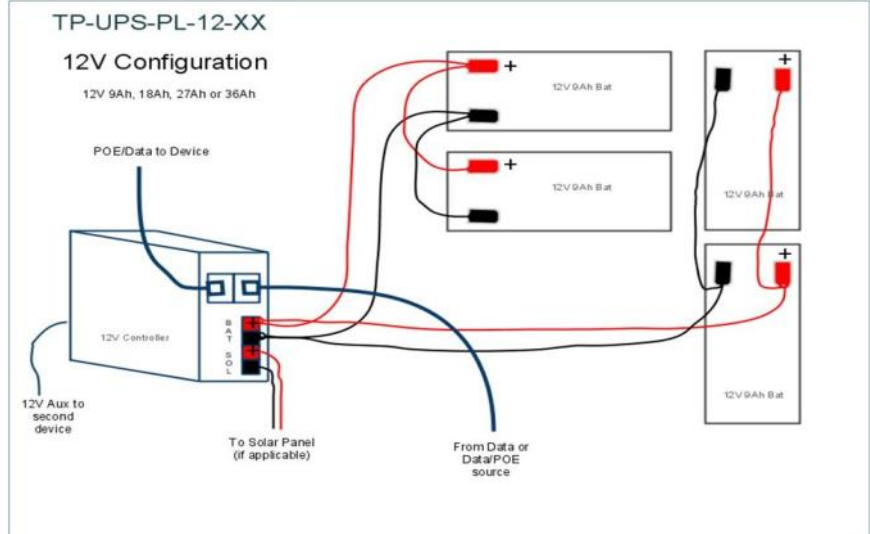

battery capacity at 8W load is 27 hours with 36Ah of battery.

3. **VENTING:** The enclosure is vented thru the wire feedthrus in the bottom of the enclosure. Don't make these airtight with silicon.

4. **BATTERY MAINTENANCE:** The batteries used in the Remote Pro systems don't require any maintenance. They should last up to 5 years in normal use. **Note: Never store batteries for any length of time in a discharged state or it will damage the battery.**

5. **SOLAR PANEL TILT:** There is a solar panel tilt calculator at the TyconSystems website <http://tyconsystems.com>. We recommend using a fixed tilt and setting to optimize for winter sun. The panel should face South if you are in the Northern Hemisphere and face North if you are in the Southern Hemisphere. You can also calculate tilt using:
Your_Latitude * 0.9 +30

7. **BATTERY OVERDISCHARGE:** We highly recommend hooking all equipment loads to the controller voltage output. This output will disconnect the load if the battery voltage drops below 11V and this will protect the battery from over-discharge. If batteries get completely discharged because the equipment was connected directly to the battery, you will reduce the battery life and you will most likely need to supercharge them with a good quality 10A automotive battery charger. Don't charge for more than 8hrs on an automotive charger. Once they are back to a normal operating range, the integrated charge controller will maintain the charge.

8. TROUBLESHOOTING:

- A. ***1 only get the SOL light on my charger controller?***—The battery voltage and solar panel voltage must match the controller. If controller is TP-SCPOE-12xx it needs 12V solar and battery voltage. If the model is TP-SCPOE-24xx it needs 24V battery and solar voltage.
- B. ***There is no LOA light and no voltage output?***—If battery voltage is too low the charge controller will turn off the load outputs. On a 12V battery system the load will turn off if battery is <11V. On a 24V battery system the load will turn off at <20V.
- C. ***Why is my solar panel voltage so high?***- Open circuit voltage on a 12V panel is around 23V, and about 40V on a 24V panel. Once you connect to the charge controller the panel voltage will be reduced to a little higher than the battery voltage.
- D. ***My system turns off at night and comes back on in the morning?***- This is a sure sign that the solar panels and/or battery capacity can't support the load. You should measure your actual load and recalculate to make sure you have adequate capacity.

9. WIND TURBINE: A wind turbine can be added to this system at any time.

Wind Turbines are good sources of power, often in times when the sun isn't shining, like on stormy days. We like to think of a wind turbine as uptime insurance. Tycon Power Systems offers small wind turbines perfectly suited to augment the RemotePro systems. The Tycon TPW-400DT-12/24 are compatible wind turbines. To add a wind turbine, it mounts to the top of a 41mm inside diameter pole. If the wind turbines comes with an external controller, You will need to mount the controller inside the enclosure and connect the output of the controller to the batteries. The connection will be in parallel with the existing solar controller connection.



10. POE SWITCH: Tycon Power offers a universal voltage 5port and 8port POE switch if more than one device needs to be powered from the battery system. The **TP-SSW5-NC**, **TP-SW5G-NC** and **TP-SW8-NC** offer the unique feature that the voltage supplied to the switch is the POE voltage sent to the devices. So 24VDC in and you get 24VDC POE to the devices. The operating voltage is 12V to 56VDC.



11. OTHER ACCESSORIES: Tycon also offers a variety of voltage conversion products to meet almost any need. Just visit tyconsystems.com for more info.

Limited Warranty

The RemotePro™ products are supplied with a limited 24 month warranty which covers material and workmanship defects. This warranty does not cover the following:

- Parts requiring replacement due to improper installation, misuse, poor site conditions, faulty power, etc.
- Lightning or weather damage.
- Physical damage to the external & internal parts.
- Products that have been opened, altered, or defaced.
- Water damage for units that were not mounted according to user manual.
- Usage other than in accordance with instructions and the normal intended use.

NOTES